

### Step 1: Basic Cleaning

Finalit No. 9 Lime and Cement Bloom Remover

1 L for up to 30 m<sup>2</sup>, depending on the degree of soiling

Application video



Dilute up to 1:10 with water



Rub in



After approx. 15 min. rinse thoroughly with water

### Step 2: Neutralisation

Finalit No. 1 Intensive Cleaner

1 L for up to 60 m<sup>2</sup>

Application video




Dilute up to 1:20 with water



Rub in



After approx. 15 min. rinse thoroughly with water

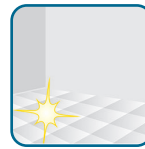

Allow cleaned surface to dry

### Step 3: Pretreatment

Finalit No. 21S Pores Filler / Pretreatment with basic protection

1 L for up to 30 m<sup>2</sup>, depending on the absorbency of the material

Application video



Dilute up to 1:3 with water



Apply 1-2 times



Remove excess product immediately

### Step 4: Protection

Finalit No. 20 Hot Impregnation / Long-term protection

1 L for up to 40 m<sup>2</sup>, depending on the absorbency of the material

Application video



Heat No. 20 in a water bath to 50-70°C



Pour into container and use undiluted



Apply 1-2 times, depending on the absorbency



Remove excess product immediately



Let dry for approx. 1 hour



Long-term protection