

Step 1: Basic Cleaning

Finalit No. 9 Lime and Cement Bloom Remover

1 L for up to 40 m², depending on the degree of soiling

Application video



Dilute up to 1:10 with water



Rub in



After approx. 15 min. rinse thoroughly with water

Step 2: Neutralisation

Finalit No. 1 Intensive Cleaner

1 L for up to 80 m²

Application video




Dilute up to 1:20 with water



Rub in



After approx. 15 min. rinse thoroughly with water

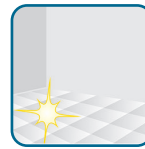

Allow cleaned surface to dry

Step 3: Protection


Finalit No. 22 Cool Impregnation

1 L for up to 100 m², depending on the absorbency of the material

Application video



Pour into container and use undiluted

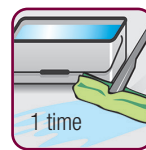


Apply 1 time



Remove excess product immediately



Let dry for approx. 1 hour

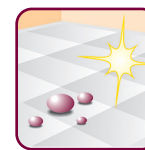

Mid term protection